




34102-040M



Tire Valve Core Torque Tool

- Preset torque setting in order to remove &
- install valve cores correctly
- Prevent overloaded torque to cause damage on valves sensor cores
- Preset torque is 0.45 N.m (4.0 Inch/lbs)
- Ergonomics design with PP handle

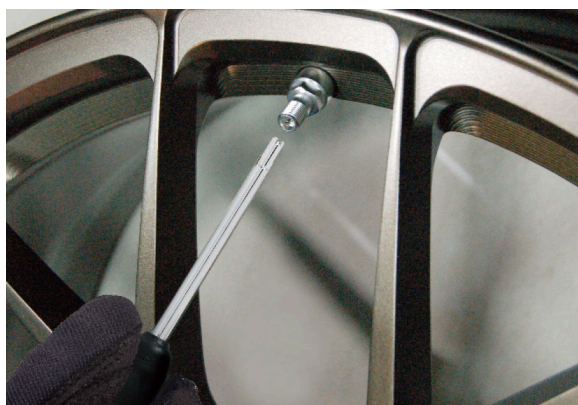

Item		
34102-040M	60	20 / 100