



9BK11



輪胎鉛子鉗

— 用於鋼圈輪胎平衡鉛塊的安裝與拆除



Item	L		A B			
	(mm)	(inch)	(mm)	(mm)		
9BK11	250	10	22	86	420	10 / 50