


KT NO.	Capacity (T)	Min. height (mm)	Max. height (mm)
9TY332-20A-B	20	420	610
9TY332-21A-B	20	665	1090

WARNING

- Failure to heed these warnings may result in loss of load, damage to jack stands, or jack stand failure resulting in personal injury or property damage.
- Do not overload jack stands beyond rated capacity. Overloading can cause damage or failure to the jack stands.
- Position load on center of saddle only.
- Always use stands in pairs on a hard level surface capable of sustaining the load. Use of stands on other than hard level surfaces can result in stand instability and possible loss of load.


MAINTENANCE & INSPECTION

- Visual inspection shall be made before each use of the stands, checking for cracks, cracked welds and missing and for damaged parts. Any stand that appears to be damaged in any way shall be removed from service immediately.
- Because of the potential hazards associated with the misuse of equipment of this type, no modifications shall be made to the product.

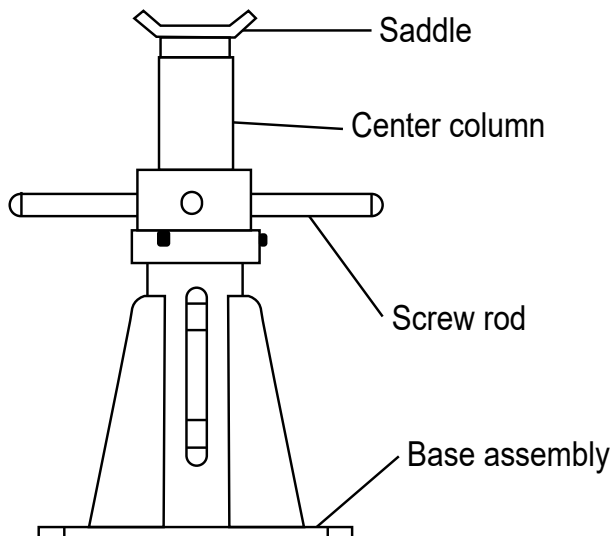

HEAVY DUTY JACK STAND OPERATION MANUAL

**20
TON**

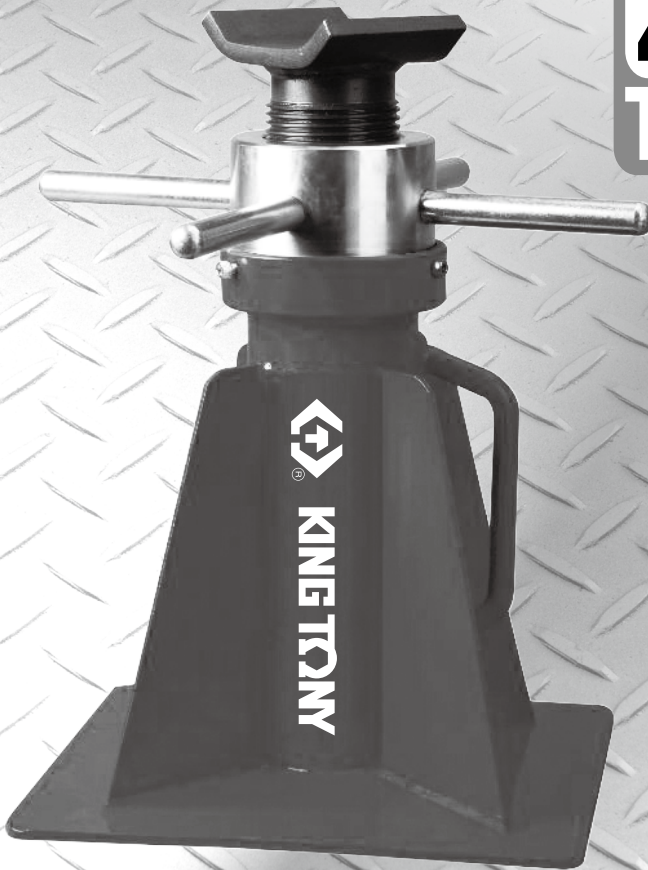

Please wear proper safety gear
while working.



NO.9TY332