






9AA11



Straight Hose Clamp Pliers

- Use to remove and install spring clamp
- Swivel V jaw easy to hold clamp in position
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

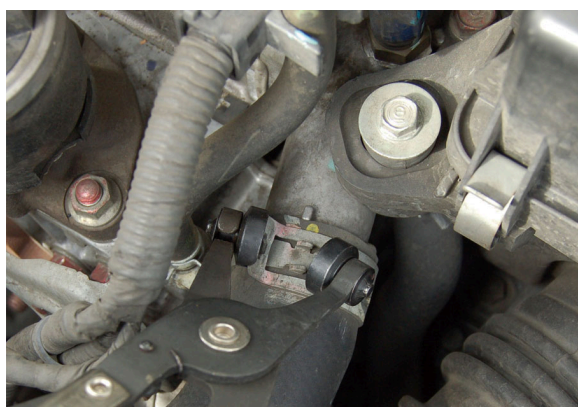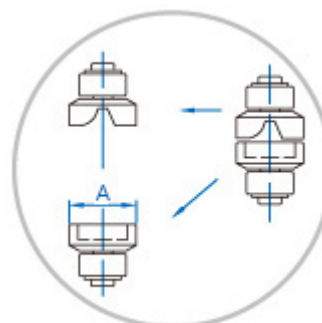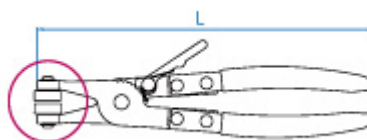

Item	L		A mm		
	(mm)	(inch)			
9AA11	220	8-21/32	55	220.1	12 / 72