






9AA16



Flat Band Hose Clamp Pliers

- Use to remove and install spring clamp
- Swivel concave Jaw easy to hold clamp in position
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

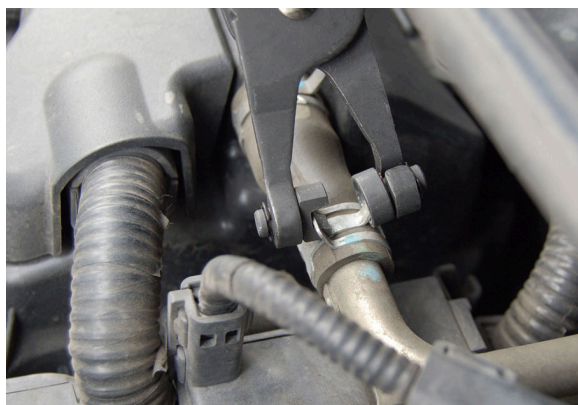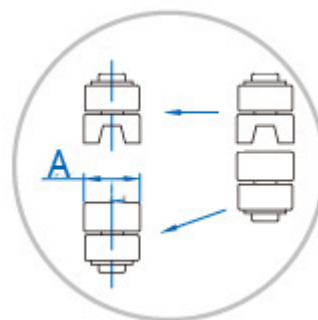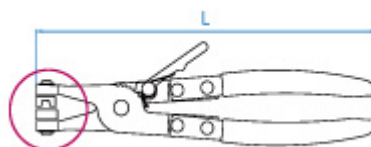

Item	L		A mm	 g	
	(mm)	(inch)			
9AA16	220	8-21/32	60	213	12 / 72