





# 9AA21



## Curved Hose Clamp Pliers

- Use to remove and install spring clamp
- 45° swivel concave jaw with greater access in confined spaces
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

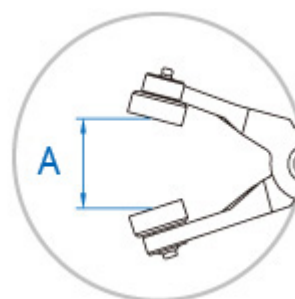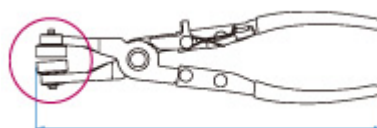

| Item  | $\frac{L}{(mm) \quad (inch)}$ |         | $\frac{A}{mm}$ |  |  |
|-------|-------------------------------|---------|----------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 9AA21 | 220                           | 8-21/32 | 53             | 224                                                                                   | 12 / 48                                                                               |