
# Straight Hose Clamp Pliers

## 9AA11

- Use to remove and install spring clamp
- Swivel V jaw easy to hold clamp in position
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

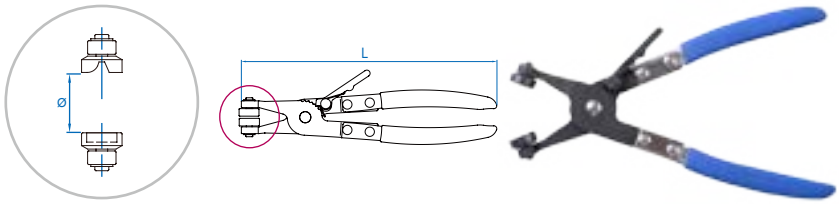





| KT NO. | Ø mm | L inch | L mm | g | |
|---|---|---|---|---|---|
| 9AA11 | 55 | 8-21/32 | 220 | 220.1 | 12 / 72 |

# Wire Hose Clamp Pliers

## 9AA13

- Use to remove and install wire clamp
- Swivel + Jaw easy to hold clamp in position
- Suitable for universal cars, especially Corbin heater hose

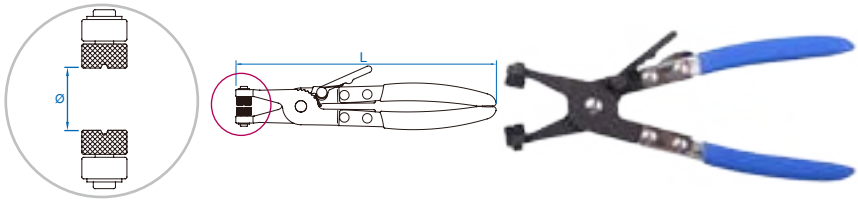





| KT NO. | Ø mm | L inch | L mm | g | |
|---|---|---|---|---|---|
| 9AA13 | 51 | 8-21/32 | 220 | 238.4 | 12 / 72 |

# Flat Band Hose Clamp Pliers

## 9AA16

- Use to remove and install spring clamp
- Swivel concave Jaw easy to hold clamp in position
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

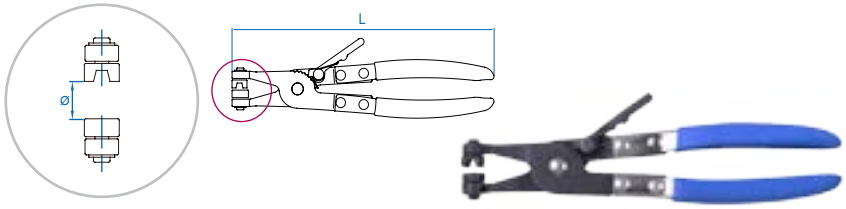




| KT NO. | Ø mm | L inch | L mm | g | |
|---|---|---|---|---|---|
| 9AA16 | 60 | 8-21/32 | 220 | 213.0 | 12 / 72 |