



Ear Hose Clamp Pliers

9BB11

- Use to remove and install ear clamp
- Special hook jaw easy to hold clamp in position
- Suitable for CV joint boot, vacuum lines, and cooling system



KT NO.	L		A max		
	Inch	mm	mm		
9BB11	10	260	22.5	364.4	12 / 48

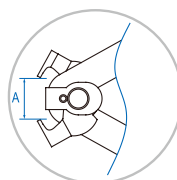



CV Boot Clamp Pliers

9BB12

- Use to remove and install stainless CV boot clamp
- Can be used with 1/2" flexible handle bar or torque wrench
- Suitable for Audi, Opel, Citroen, SEAT, BMW, Mercedes-Benz, Honda, Nissan, Mazda, Ford, GM, Chrysler



KT NO.	L		A max		
	Inch	mm	mm		
9BB12	9-1/2	235	12	512.4	6 / 36

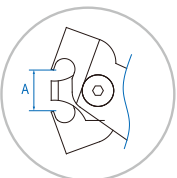



CV Boot Clamp Pliers with Socket

9BB13

- Use to remove and install stainless CV boot clamp
- Can be used with 3/8" flexible handle bar or torque wrench
- Suitable for Audi, Opel, Citroen, SEAT, BMW, Mercedes-Benz, Honda, Nissan, Mazda, Ford, GM, Chrysler



KT NO.	L		A max		
	Inch	mm	mm		
9BB13	11	278	45	887.8	6 / 36

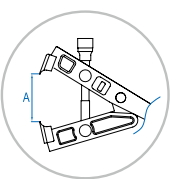

CV Boot Clamp Installer

9BB31

- Use to cut and install clamp with built-in cutting arm
- Includes locking device and ratchet function
- Suitable for general vehicle types

Lock



Cut



KT NO.	L			
	Inch	mm		
9BB31	6-1/2	124	346.8	6 / 72

