

# Wheel Lock Screw Socket Set


## 9BW0120

VW

- Used to permit servicing of customer vehicles, even lose the key
- Applicable for installing and removing locks of most VW models
- Chrome molybdenum, alloy steel chrome plated
- Work with 17mm hex tool
- Contents :  
#521, #522, #523, #524, #525, #526, #527, #528, #529, #530, #531, #532, #533, #534, #535, #536, #537, #538, #539, #540

 2.9  1 / 5

20  
PC.

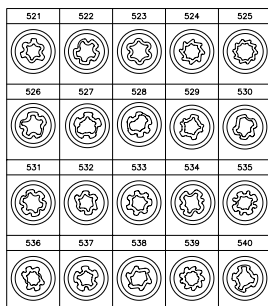


## 9BW0220

BMW

- Used to permit servicing of customer vehicles, even lose the key
- Applicable for installing and removing locks of most BMW models
- Chrome molybdenum, alloy steel chrome plated
- Work with 17mm hex tool
- Contents :  
#041, #042, #043, #044, #045, #046, #047, #048, #049, #050, #051, #052, #053, #054, #055, #056, #057, #058, #059, #060

 1.94  1 / 5

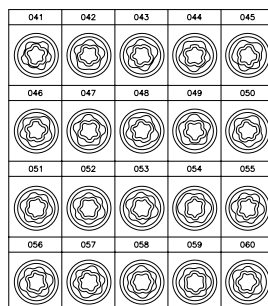

20  
PC.



# 10 Point Socket 20MM

## 9BW4801

- 1/2" DR.
- 10 points
- Use for replacing and removing retaining screw on rear trailing arm on HONDA CR-V

KT NO.	mm	D1 mm	ℓ mm	L mm		
9BW4801	20	25	15	38	88.0	10 / 160

