




9AA16

Flat Band Hose Clamp Pliers

- Use to remove and install spring clamp
- Swivel concave Jaw easy to hold clamp in position
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

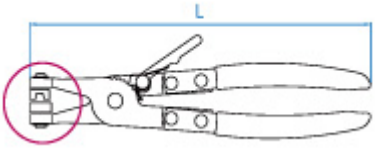

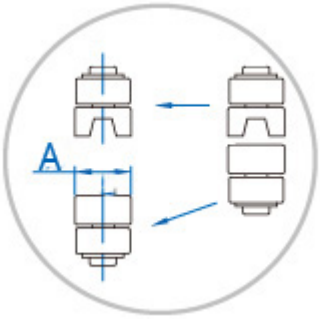

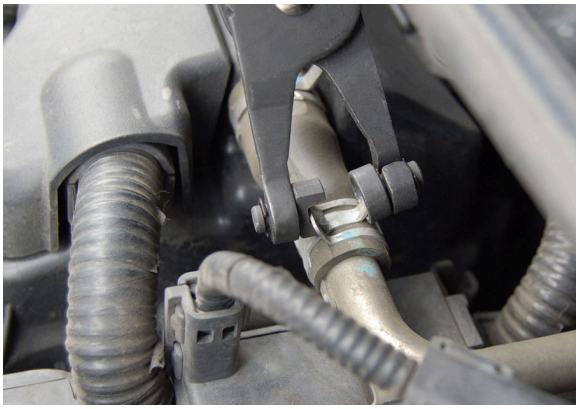

Item	L (mm)	L (inch)	A mm	g	
9AA16	220	8-21/32	60	213	12 / 72