

9BB13

CV Boot Clamp Pliers With Socket

— Used to remove and install stainless CV boot clamp

— Can be used with 3/8" flexible handle bar or torque wrench

— Suitable for Audi, Opel, Citroen, SEAT, BMW, Mercedes-Benz, Honda, Nissan, Mazda, Ford, GM, Chrysler

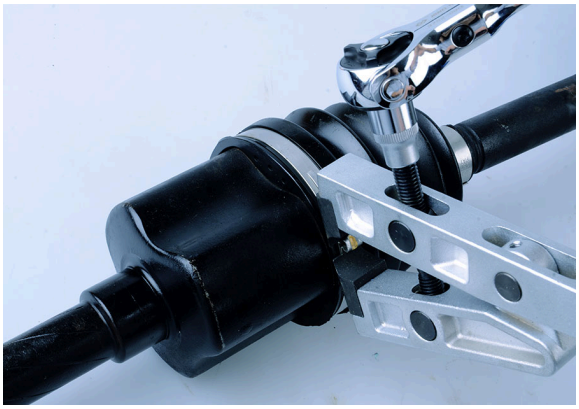



Item	L (mm)	L (inch)	A Max(mm)	g	
9BB13	278	11	45	887.8	5 / 20