

# 9AA21

## Curved Hose Clamp Pliers

- Use to remove and install spring clamp
- 45° swivel concave jaw with greater access in confined spaces
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

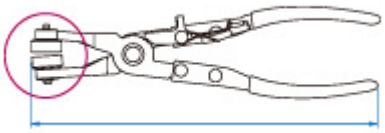

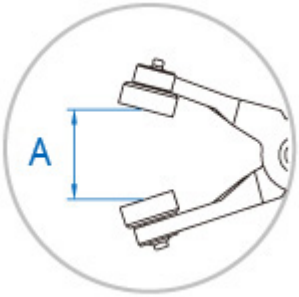


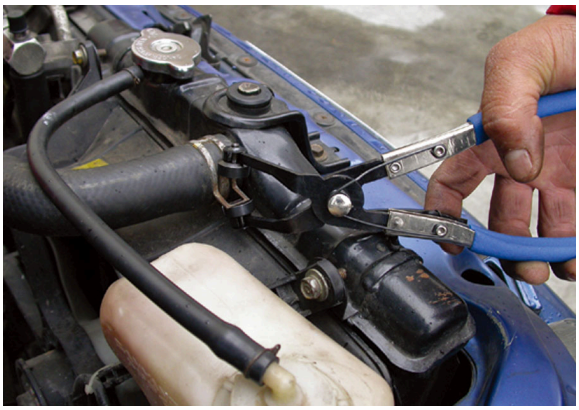

| Item | L (mm) (inch) | A mm | g | |
|---|---|---|---|---|
| 9AA21 | 220 8-21/32 | 53 | 224 | 12 / 48 |